

ECO DISHWASHER TABLETS

Description

Introducing our NEW and noticeably improved Eco Dishwasher tablets. Bringing you eco friendly dishwashing with maximum cleaning power. Our Plastic-Free, Phosphate-Free, All-In-One Eco Dishwasher Tab works wonders on your dishes, glasses and pans. With salt and rinse aid built-in and no plastic wrapper, simply pop in your dishwasher for a superior clean every time.

These new tablets are:

- Zero Plastic Waste
- An ultra-compacted and efficient tab
- Come in a small compact box to ensure we save space in your cupboard
- Plant & mineral-based formula
- Proven to clean better than other eco dishwasher tablets
- Works in hard water, low temperature and a quick wash
- Suitable for septic tanks



NEXT GENERATION TABLET

Get your best ever eco clean.

Plates, cutlery, mugs, glasses, lasagna dishes - everything cleaned spotless first time, with no marks, and no residue.

How it's used

Before loading into the dishwasher, remove food scraps from your dishes and cutlery and rinse heavily soiled items. Load your machine according to the manufacturer's instructions. There is no need to unwrap the EcoDrop tablet as the film is dissolvable and biodegradable. Be sure to handle the tablet with dry hands, and place one tablet per wash into the dispenser. Do not place tablet in the cutlery basket. Wash hands after handling. Run dishwasher as per manufacturer's instructions.



THE ECO CHOICE

100% Plastic-Free and 100% Phosphate Free
Vegan and Animal Cruelty Free
Plant-based formula

Wave goodbye to those awful plastic dishwasher bags and tabs individually wrapped in plastic.

GET THE BEST POSSIBLE CLEAN

We recommend washing dishes on an "Eco" setting, overnight if you can to save energy.

In addition, we suggest chucking our tab in the bottom of your dishwasher.

Yes, you read that right.

It helps to ensure the outside of the tablet doesn't get stuck in the compartment and helps provide an even clean.



Albert Plesmanweg 77

3088 GB Rotterdam

export@kroonint.nl